



**MULHERN  
BELTING, INC.**

Oakland, NJ  
Atlanta, GA  
Fairfield, OH  
Michigan City, IN  
Kansas City, MO

## V-Guide Sizes and Information

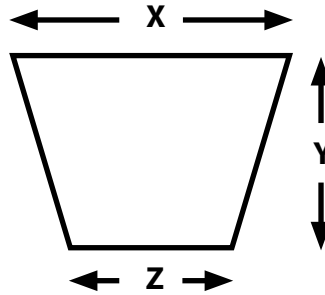

V-Guide Section	Other Reference	X		Y		Z		Pulley Diameter					
		Imperial	Metric	Imperial	Metric	Imperial	Metric	Solid			Notched		
								Rubber	PVC	PU	Rubber	PVC	PU
K6		.250"	6mm	.160"	4mm	.150	3mm	xxx	2"	3"	xxx	1.5"	2.5"
K8		.315"	8mm	.210"	5mm	.200"	5mm	xxx	2.5"	3.5"	xxx	2"	3"
Modified O		.375"	10mm	.200"	5mm	.250"	6mm	xxx	2.5"	4"	xxx	2"	3"
O	K10 / 3L	.375"	9.5mm	.250"	6mm	.200	5mm	3"	2.5"	4"	2.5"	2"	3"
Modified A		.500"	13mm	.218"	5.5mm	.384"	10mm	xxx	3"	5"	xxx	2.5"	4"
A	K13 / 4L	.500"	13mm	.312"	8mm	.285"	7mm	3"	3"	5"	2.5"	2.5"	4"
K15		.590"	15mm	.315"	8mm	.374"	9.5mm	xxx	5"	6"	xxx	3"	4"
B	K17 / 5L	.625"	17mm	.437"	11mm	.324"	8.5mm	5"	5"	6"	3"	3"	4"
C	K22	.875"	22mm	.531"	14mm	.384"	10mm	6"	6"	9"	4"	4"	7"
D		1.25"	32mm	.750"	19mm	.656"	16.5mm	12"	xxx	xxx	8"	xxx	xxx
E		1.375"	35mm	1"	25.4mm	.750"	19mm	16"	xxx	xxx	14"	xxx	xxx

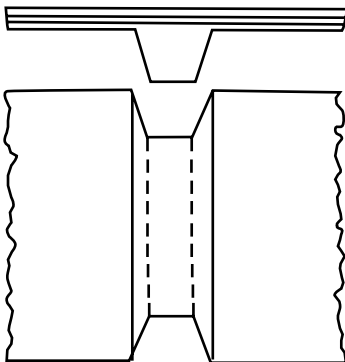

### How Much Space Should Be Between The V-Guide and Pulley?

It is recommended that the Pulleys, Conveyor Beds and/or Idlers should be grooved 1/4" wider and 1/16" deeper than the v-guide.

### Are Two V-Guides Better Than One?

It is rarely recommended to build a conveyor system with two v-guides. Two v-guides often 'fight' each other and affect belt tracking and/or shorten belt life. If you must use two guides, guide placement should be expressed as the the center distance between the guides.